

install	Before installing ATOK	
	Let's begin the installation (Windows).	
	Let's begin the installation (Macintosh)	
	Add or remove features later	
	supplement	
How to use	Enter text using the input panel.	
	Enter text using the Japanese graffiti function.	
	Useful features to know	
	Register/delete words	
	Change dictionary settings and operating environment	

ATOK for Palm OS 5

日本語グラフィティ対応版

install

Before installing ATOK	
4. Action Environment	
For those who already have ATOK... 5	
Installation Methods and Available Features	6 Let's
Start Installation (Windows) 7 Installation by Size	7
Installation by Feature	11 Let's
Start Installation (Macintosh) 13 Installation by Size	
Installation by Feature	13 Installation by
Feature	15
Add or remove features later 17.	
Add features that were not installed.	
Uninstalling ATOK	17
Uninstalling unused input panels	18
Uninstalling unused dictionaries	19
Supplementary information 20 Using external	
memory	20 How to reduce
the size of the installed files	21
Enter text using the input panel. 22	
Display the input panel	22
Enter a mixed kanji and kana text	24 Change the
way the phrases are divided	26
Correcting characters that were entered incorrectly	27
Enter katakana characters	28
Enter alphabet characters or numbers	29
Enter symbols, emoticons, etc.	30
Enter text using the Japanese Graffiti function. 32 Enable the Japanese	
Graffiti function.	32
Enter the reading in hiragana and convert it to kanji	32
Enter letters, numbers, and symbols	34
Useful features to know 36	
Predictively display characters that have been entered once / Predictive	
conversion	36 Input by handwriting characters
Converting Katakana words to English / Katakana-to-English dictionary	38
Register and use frequently used documents /	
Favorites	39 Create emoticons
Registering and deleting words 41 Registering frequently used	
words	41 Deleting registered
words	42
Use words registered in ATOK (Windows version, etc.)	42
Change dictionary settings and operating environment	44

How to use

Make use of the help section and website!

- Tap the

bottom right of the help screen and select [O. Help] from the ATOK menu that appears.

ATOK's help will be displayed. This is useful for looking up how to use ATOK when you don't have the manual handy.

- Support FAQ <http://www.justsystem.co.jp/support/>

This section compiles frequently asked questions and their answers received by our support center in a Q&A format. Please refer to the support FAQ if you encounter any problems.

- Users' page: <http://www.justsystem.co.jp/palm/>

This page provides helpful information for users of ATOK on Palm devices.

Regarding the notation in the manual :

Depending on your Palm device (main unit), the names of the buttons around the Graffiti input area may differ.

Names and other terms may differ from those used in this book.

•The Palm Desktop software is explained assuming you are using the following versions. Depending on the version you are using, some screens and operating methods may differ. •Version 4.0 Japanese version (Windows

version) •Version 2.6 Japanese version (Macintosh version)

Terminology Palm

Body equipped with PalmOS

device Graffiti input area An area for handwriting input using Graffiti characters P.23 Tap An operation

of lightly pressing an icon or button on the screen with the stylus Drag An operation of lightly touching the screen with the stylus and tracing

Before installing ATOK

Please install and use ATOK on your Palm device.

•Action Environment

The required operating system and available storage space on your Palm device to use ATOK are as follows:

YOU*	Japanese version of Palm OS® Ver. 5.0J . *This will not work on Palm OS versions prior to 5.
Required capacity	The following configurations are available for installation: Minimum 1.3MB or more, Standard 2.1MB or more, Maximum 4.1MB or more. *The required storage capacity may vary slightly depending on the format and available storage space of your Palm device. Yes.

*The English version of Palm OS is not guaranteed to work.

Additionally, the following environment is required when installing ATOK.

- A personal computer with Palm Desktop software installed (Windows/Macintosh; hereinafter referred to as "PC").

- CD-ROM drive • Connect

your PC and Palm device using a HotSync® cradle (or cable, etc.)

environment

*This includes system requirements for your computer, instructions on how to install Palm Desktop software, and HotSync.

For details on its features, please refer to the Palm Desktop software manual included with your Palm device.



Notice

For users of other Japanese input systems

ATOK cannot be installed and used on Palm devices that already have another Japanese input system installed. Please uninstall any other Japanese input systems before installing ATOK.



Hint

Check the available storage space on your Palm device.

Check the available storage space on your Palm device using the following method:

1. Tap the [Home] * icon in the upper left corner of the Graffiti input area.
2. Tap the [Menu] icon in the lower left corner of the Graffiti input area.
3. Tap [Information].

The amount of free memory will be displayed.

*Depending on your Palm device, the name of the [Home] icon in the upper left of the Graffiti input area may differ.
They may differ.

•For those who already have ATOK

If you have a device with ATOK pre-installed, please check the following before installing it.

•Notes on installation

- You do not need to delete the old version of ATOK. Please perform an overwrite installation.
- Before installing, be sure to turn off "Use ATOK for Japanese input" on your Palm device.
Please do so.
▶ P.17 Disable ATOK

•Content that will be carried over during version upgrades

The content that is carried over will vary depending on the version of ATOK you have installed.

content	Ver.2.2.x
ATOK settings	●
Registered words	●
Temporary Learning	×
Confirmation History	●
Emoticons	●
Favorite Documents	●

- : Carried over ×:
Not carried over ◻:
No function



Check the ATOK version

Check your ATOK version using the following method:

1. Tap the [Home] icon in the upper left corner of the Graffiti input area.
2. Tap the [Menu] icon in the lower left corner of the Graffiti input area.
3. Tap [Information].
4. Tap [Version].

The installed features and their versions will be displayed.

5. Check the version of [ATOK settings].

•Installation method and available functions

• Installation process

- STEP 1:** Using Palm Desktop software on your computer (Windows/Macintosh)
Select the files you want to install.
- STEP 2:** Execute the HotSync function to install ATOK on your Palm device.
- STEP 3:** Enable ATOK on your Palm device.

•Installation method

There are two ways to install ATOK.

- Install according to available storage space.

You can install the software in one of three configurations—minimum, standard, or maximum—to match the available storage space on your Palm device. See page 7 for Windows and page 13 for Macintosh installation options.

Before installingSelect and install the features you want to use.

In addition to the basic functions, you can choose and install the functions you want from four options: handwriting input, favorites function, large dictionary, and katakana-to-English dictionary. Function-specific installation: Windows: P.11 / Macintosh: P.15

•Features that can be installed and required storage space

In feature-based installation, the total file size required for each feature being installed will be the total storage space needed during installation.

function	Minimum (approximately 1.3MB)	Standard (approximately 2.1MB)	Maximum* (approx. 4.1MB)
Basic functions (approximately 1.3MB)	●	●	●
Handwriting input function (approx. 735KB)	×	●	●
Favorites feature (approx. 30KB)	×	●	●
Large dictionary (approximately 2.1MB)	×	×	●
Katakana-to-English Dictionary (approx. 800KB)	×	×	●

*A large dictionary is included instead of the standard dictionary.



When installing by feature, be sure to install the basic features.
The basic functions are necessary programs for using ATOK. It is not possible to select and install only functions other than the basic functions.



About each function
Basic functions ...These are the basic functions of ATOK.
Handwriting input function...A function that allows you to input characters by handwriting. Favorites function...A function that allows you to easily input pre-written phrases across multiple lines. Large dictionary...A dictionary with a larger vocabulary than the standard dictionary included in the basic functions.
Yes, it can be used as a system dictionary instead of the standard dictionary.
Katakana-to-English Dictionary... This dictionary allows you to input the pronunciation of a Katakana word and convert it to English.
How to reduce the installation size (p.21) ►

the installation (Windows)

This guide explains how to install ATOK on Windows using Palm Desktop software.

*For detailed information about Palm Desktop software, please refer to the manual included with your Palm device.
For instructions on using a Macintosh, please see page 13.

Please check the available storage space on your Palm device before installing.

► P.4 Check the available storage space on your Palm device

•Installation by size

Windows

Choose the file configuration that best suits the available storage space on your Palm device and install it.
Each file configuration is located in the following folders on the ATOK CD-ROM.

- Smallest (approx. 1.3MB): JUST ATOK PALM TYPICAL SMALL
- Standard (approx. 2.1MB): JUST ATOK PALM TYPICAL MEDIUM
- Large (approx. 4.1MB): JUST ATOK PALM TYPICAL LARGE

* For details on the functions available in each configuration, please see page 6, "About Each Function". * For detailed information on the file structure within each folder, please refer to the JUST folder on the ATOK CD-ROM.
Please see FL_ATOK.TXT.


•STEP 1: Choose the files to install

This section explains how to install with the maximum configuration.

1. Insert the ATOK CD-ROM into your computer's CD-ROM drive.
2. Click the Windows Start button, then click Programs *1 - Palm Desktop *2 - In Select the [Stall Tool].


*1 In Windows XP, it's under "All Programs". *2 The wording may vary depending on your Palm device.

3. Click Add .

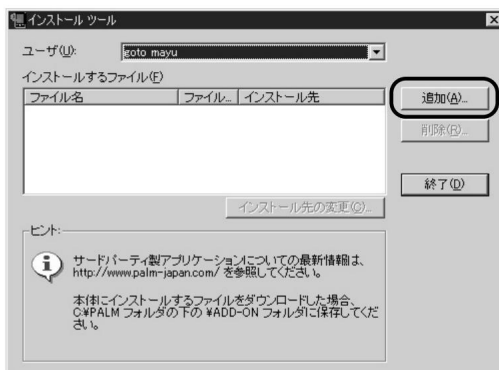


•STEP3: Make ATOK usable

1. Tap the Home icon in the upper left corner of the Graffiti input area on your Palm device.
2. Tap [ATOK Settings].

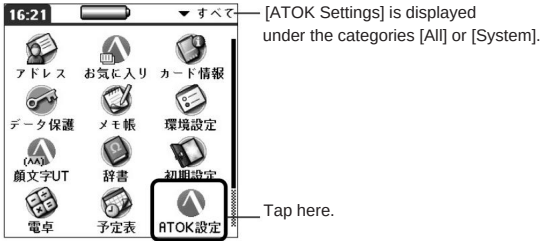


3. Review the contents of the license agreement. ☐ yes Tap it.

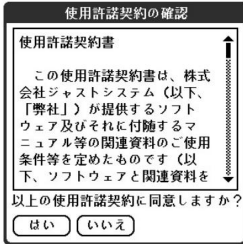

4. Enter the user name, ☐ OK Tap it.

The names you register here will be automatically added to the word list.

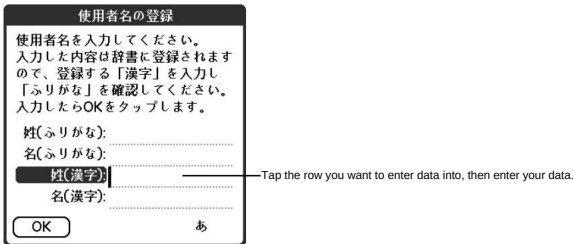

▶ Continued on the next page




Trouble

The message "Registration failed" is displayed when registering the user name. Insufficient memory space may be preventing the necessary files from installing ATOK. Please tap the [Home] icon to return to the application screen, check your available memory space, and then try reinstalling ATOK.

▶ P.4 Check the available storage space on your Palm device

5. On the ATOK settings screen, tap [Use ATOK for Japanese input]  enable it.

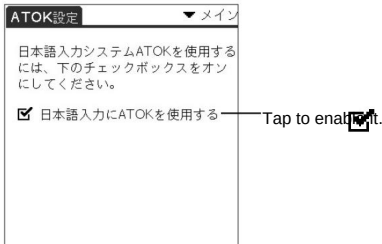

This will enable you to use ATOK.

Start the installation.

Microsoft Windows

9



Hint

Please keep the ATOK CD-ROM safe.

A CD-ROM is required in the following cases:

- Add features that were not installed
- Install ATOK again

If your CD-ROM is broken, you can get a replacement for a fee.

•Installation by function

Windows

You select and install the basic functions and the functions you

want to use. The files for each configuration are located in the following folders on the ATOK CD-ROM.

- Basic Functions (approx. 1.3MB): JUST¥ATOKPALM¥CUSTOM¥BASIC • Handwriting Input Function (approx. 735KB): JUST¥ATOKPALM¥CUSTOM¥TEGAKI • Favorites Function (approx. 30KB): JUST¥ATOKPALM¥CUSTOM¥OKINIIRI • Large Dictionary (approx. 2.1MB): JUST¥ATOKPALM¥CUSTOM¥SYSDIC • Katakana-English Dictionary (approx. 800KB): JUST¥ATOKPALM¥CUSTOM¥KANAEIGO
- *For details on each function, please see P.6 About Each Function. *For detailed file structure within each folder, please refer to the JUST folder on the ATOK CD-ROM. Please see FL_ATOK.TXT.


•STEP 1: Choose the files to install

This section explains how to install a katakana-to-English dictionary, in addition to the basic functions.

1. Insert the ATOK CD-ROM into your computer's CD-ROM drive.
2. Click the Windows Start button, then click Programs *1 - Palm Desktop *2 - In Select the [Stall Tool].

*1 In Windows XP, it's under "All Programs". *2 The wording may vary depending on your Palm device.


3. Click Add .

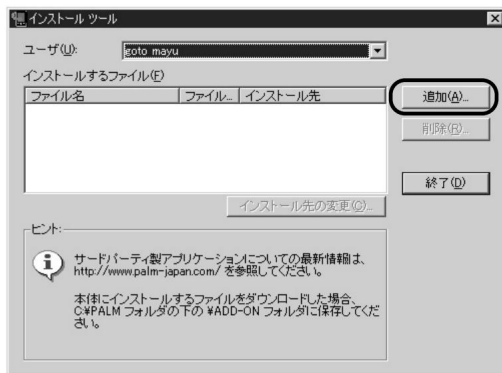

4. In [File Location], select the JUST¥ATOKPALM¥CUSTOM¥BASIC folder from the drive where the ATOK CD-ROM is inserted.

► Continued on the next page

5. Select all the displayed files and click Open .

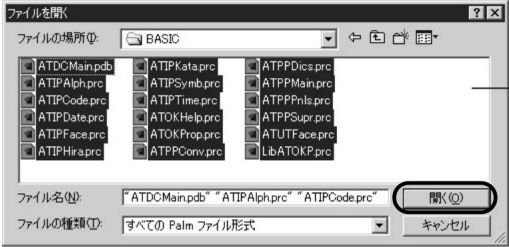

Move the cursor to the list and press the C+A keys to select all files.

Click " Add Again". 7. Using the same procedure as in step 4, select the JUSTATOKPALMT\CUSTOM\KANAEIGO folder where the Katakana-English dictionary is located.

Start the installation. 8. Select all the displayed files and click [OK]. 9. The selected files will appear under [Files to install].

9. Click Finish .

•STEP2: Execute HotSync

1. Ensure your computer and Palm device are connected via the HotSync cradle (or cable, etc.), then press the HotSync button on the cradle (or cable, etc.).

Once HotSync is complete, a reset button will appear on your Palm device.

2. Tap Reset .

•STEP3: Make ATOK usable

Follow the instructions on page 9, STEP 3: Make ATOK usable.



Hint

Please keep the ATOK CD-ROM safe.

A CD-ROM is required in the following cases:

- Add features that were not installed
- Install ATOK again

If your CD-ROM is broken, you can get a replacement for a fee.

start the installation (Macintosh)

This guide explains how to install ATOK on a Macintosh using Palm Desktop software.

*For detailed information about Palm Desktop software, please refer to the manual included with your Palm device.

Please check the available storage space on your Palm device before installing.

► P.4 Check the available storage space on your Palm device

•Installation by size

Macintosh

Choose the file configuration that best suits the available storage space on your Palm device and install it. Each file configuration is located in the following folders on the ATOK CD-ROM:

- Minimum (approx. 1.3MB): JUST:ATOKPALM:TYPICAL:SMALL
- Standard (approx. 2.1MB): JUST:ATOKPALM:TYPICAL:MEDIUM
- Maximum (approx. 4.1MB): JUST:ATOKPALM:TYPICAL:LARGE

* For details on the functions available in each configuration, please see page 6, "About Each Function". *

For detailed information on the file structure within each folder, please refer to the JUST folder on the ATOK CD-ROM.

Please see FL_ATOK.


•STEP 1: Choose the files to install

This section explains how to install with the maximum configuration.

1. Insert the ATOK CD-ROM into your computer's CD-ROM drive.
2. Double-click the [HotSync Manager] in the Palm folder on your Macintosh.
3. From the [HotSync] menu, select [Install Palm File]. 4. Click [Add to List].



5. From the drive where the ATOK CD-ROM is inserted, JUST:ATOKPALM:TYPICAL:
Select the LARGE folder. 6.
Select the displayed file and click Add . 

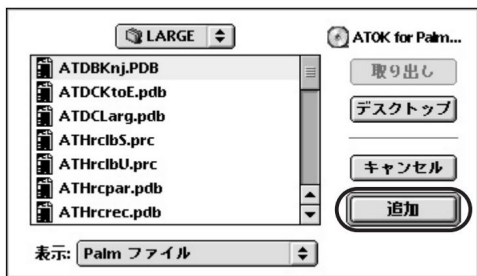

7. Repeat step 6 to add all the displayed files. *1

*1 Drag and drop the LARGE folder from the ATOK CD-ROM onto the [Install Palm Files] screen.

Start the installation. Then, all the files will be added at once.

•STEP2: Execute HotSync

1. Ensure your computer and Palm device are connected via the HotSync cradle (or cable, etc.), then press the HotSync button on the cradle (or cable, etc.).

Once HotSync is complete, a reset button will appear on your Palm

2.  device. Tap it.

•STEP3: Make ATOK usable

Follow the instructions on page 9, STEP 3: Make ATOK usable.



Hint

Please keep the ATOK CD-ROM safe.

A CD-ROM is required in the following cases:

- Add features that were not installed •Install ATOK again

If your CD-ROM is broken, you can get a replacement for a fee.

•Installation by function

Macintosh

Install by selecting the basic functions and the functions you want

to use. The files for each configuration are located in the following folders on the ATOK CD-ROM: *

Basic functions (approx. 1.3MB): JUST:ATOKPALM:CUSTOM:BASIC * Handwriting input

function (approx. 735KB): JUST:ATOKPALM:CUSTOM:TEGAKI * Favorites function

(approx. 30KB): JUST:ATOKPALM:CUSTOM:OKINIIRI * Large dictionary (approx. 2.1MB):

JUST:ATOKPALM:CUSTOM:SYSDIC * Katakana-English dictionary (approx. 800KB):

JUST:ATOKPALM:CUSTOM:KANAIEGO *For details on each function, please see P.6 About

each function. *For detailed file structure within each folder,

please see the following on the ATOK CD-ROM:

Please check the FL_ATOK folder in the JUST folder.

•STEP 1: Choose the files to install


This section explains how to install a katakana-to-English dictionary, in addition to the basic functions.

1. Insert the ATOK CD-ROM into your computer's CD-ROM drive.
2. Double-click the [HotSync Manager] in the Palm folder on your Macintosh.
3. From the [HotSync] menu, select [Install Palm File]. 4. Click [Add to List].



▶ Continued on the next page

5. From the drive where the ATOK CD-ROM is inserted, type JUST:ATOKPALM:CUSTOM:
Select the BASIC folder.
6. Select the displayed file and click Add .

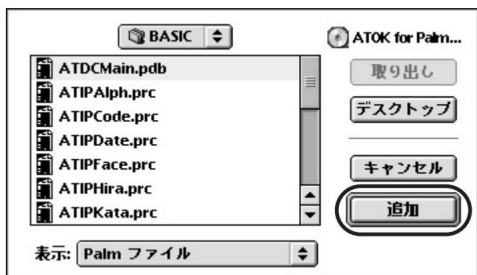

7. Repeat step 6 to add all the displayed files. *1 8. Using the same procedure
as step 5, select the JUST:ATOKPALM:CUSTOM:KANAEIGO folder.

Start the installation.

Masu.

9. Add all displayed files using the same procedure as in steps 6 and 7. *1

*1 If you drag and drop the BASIC (or KANAEIGO) folder from the ATOK CD-ROM onto the [Install Palm Files] screen, the files will be added all at once.

•STEP2: Execute HotSync

1. Ensure your computer and Palm device are connected via the HotSync cradle (or cable, etc.), then press the HotSync button on the cradle (or cable, etc.).

Once HotSync is complete, a reset button will appear on your Palm device.

2.  .

•STEP3: Make ATOK usable

Follow the instructions on page 9, STEP 3: Make ATOK usable.



Please keep the ATOK CD-ROM safe.

A CD-ROM is required in the following cases:

- Add features that were not installed
- Install ATOK again

If your CD-ROM is broken, you can get a replacement for a fee.

Add or remove features later.

•Adding features that were not installed

Follow the instructions on page 11 (or page 15) for feature-specific installation to install the features you want to add.

•Delete ATOK

First, disable ATOK, then uninstall it.


•Disable ATOK

1. Tap the [Home] icon in the upper left corner of the Graffiti input area.
2. Tap [ATOK Settings].
The ATOK settings screen will be displayed.
3. On the ATOK settings screen, tap [Use ATOK for Japanese input] to enable it.

This will disable the use of ATOK.

•Delete ATOK

1. Tap the [Home] icon in the upper left corner of the Graffiti input area.
2. Tap the [Menu] icon in the lower left of the Graffiti input area.
3. Tap [Application - Delete].

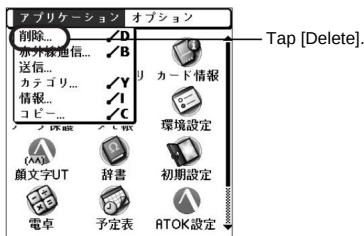

4. Select the function you want to delete.
► P.18 ATOK function names as displayed on Palm devices
5. Tap **delete**.
A confirmation message will be displayed.

6. Tap it.

The function selected in step 4 will be deleted.

7. Remove all ATOK functions using the same procedure as in steps 4-6.

This completes the uninstallation of ATOK.

•Delete unused input panels

The input panel can be removed using the following method. If you want to use the removed input panel again, you will need to reinstall it.

1. Tap the [Home] icon in the upper left corner of the Graffiti input area.

2. Tap  [ATOK Settings].

The ATOK settings screen will

appear. 3. Tap [jMain] in the upper right corner of the screen and select [Input

Panel]. 4. Select the input panel you do to use and tap .

▶ On page 21 , a message will

appear confirming the file list in the

input panel]. Tap 5. Yes

The input panel selected in step 4 will be deleted.

We will add features later

Delete



Hint

ATOK function names as displayed on Palm devices

When you install ATOK, the following function names will appear on the uninstallation screen of your Palm device. When uninstalling ATOK, delete all of the following items: • Favorites •

Emoticon UT •

ATOK Settings



Notice

The standard input panel cannot be deleted.

The standard input panel, which appears when you tap the [Keyboard] icon in the upper right corner of the Graffiti input area, cannot be deleted.

Change the default input panel in the ATOK settings screen, and then delete it.

▶ P.44 Changing dictionary settings and operating environment

For models with ATOK pre-installed

The ATOK input panel, which is built into Palm devices by default, cannot be removed.

•Delete dictionaries you don't use

You can delete dictionaries using the following method. If you want to use a deleted dictionary again, you will need to reinstall it.

1. Tap the [Home] icon in the upper left corner of the Graffiti input area.

2. Tap [ATOK Settings].

The ATOK settings screen will be displayed.

3. Tap [yMain] in the upper right corner of the screen and select [Dictionary/Learning]. 4. Tap the dictionary name displayed to the right of [System Dictionary].

This will take you to the system dictionary settings

screen. 5. Make sure that [Main] is selected in [Dictionary List], and then select the dictionary you want to delete from the list.

Tap "

6. . A confirmation message will appear.

7. Tap this. Yes, the dictionary will be deleted.

Tap This will return you to the OK System Dictionary settings screen.



If it is set as the dictionary used for conversion, it cannot be deleted.

If the dictionary you want to delete is set as the dictionary used for conversion, you cannot delete it.

Before proceeding, change the dictionary settings in the [Dictionary/Learning] section of the ATOK settings screen.

▶ P.44 Changing dictionary settings and operating environment

supplement

• Use of external memory

You can move (or copy) dictionaries installed on your Palm device to external memory. This is useful when you want to reduce the file size of your Palm device. *ATOK cannot be installed to external memory. *On Palm devices that do not support VFS (Virtual File System), which is standard in Palm OS Ver. 4.0, you cannot move (or copy) dictionaries to external memory.

supplement

• Move the dictionary to external memory

This section explains how to configure your Palm device to move the large dictionary installed on it to external memory for use.

1. Insert the external memory into the Palm device.
2. Tap the [Home] icon in the upper left corner of the Graffiti input area.
3. Tap [ATOK Settings].

The ATOK settings screen will appear. 4. Tap [Main] in the upper right corner of the screen and select [Dictionary/Learning]. 5. Tap the dictionary name displayed to the right of [System Dictionary]. 6. Confirm that [Main] is selected in [Dictionary List] and select [Large Dictionary] from the list. Masu.



7. Tap it.
A confirmation message will be displayed.
8. Tap it.
The large dictionary will move to external memory. Tap .
9. Confirm that is displayed at the top of the [Large Dictionary]. Tap .

• How to reduce the size of the files to install

• Install only the input panels you want to use.

1. Install by size on page 7 (or page 13) or by function on page 11 (or page 15)

Follow the instructions to proceed with the installation.

2. On the file selection screen, select the input panel file you want to use from the files for the input panel.
I'll choose II.
3. Then, proceed according to the respective installation instructions.

File list in the input panel

[Hiragana] Input Panel	ATIPHIRA.PRC
[Katakana] Input Panel	ATIPKATA.PRC
[Alphanumeric] Input	ATIPALPH.PRC
Panel [Symbol] Input Panel	ATIPSYMB.PRC
[Character Code Table] Input Panel	ATIPCODE.PRC
[Time] Input Panel	ATIPTIME.PRC
[Date] Input Panel	ATIPDATE.PRC
[Emoticon] Input Panel	ATIPFACE.PRC, ATUTFACE.PRC
[Handwriting] Input Panel	ATIPHAND.PRC
[Favorites] Input Panel	ATIPFAVR.PRC, ATUTFAVR.PRC

• Delete unused input panels

Follow the instructions on page 18 to remove any input panels you don't need.



Hint

If you have a model with pre-installed software

Models with ATOK pre-installed already have the standard dictionary installed.

Therefore, you can use ATOK without installing the standard dictionary (ATDCMAIN.PDB) of this product. It is available.

Enter text using the input panel.

Here are some ways to input text using ATOK:

1. Tap the ATOK input panel to input characters. 2. Handwrite hiragana and other characters in the Graffiti input area (P.32) . 3. Handwrite Graffiti characters in the Graffiti input area.

*For instructions on how to input Graffiti characters, please refer to your Palm device's manual or help section.

This section explains how to input and convert characters using the ATOK input panel.

•Display the input panel

ATOK offers various types of input panels. Using the

appropriate input panel depending on the type of character you're typing will allow for more efficient input.

Use the input panel

Mixed Kanji and Kana text, alphanumeric characters, symbols, etc. • Various other characters and emoticons

Hiragana P.24, Katakana P.28, Alphanumeric
Characters P.29, Symbols

P.30 Date P.31 Time P.31 Character code table P.31

P.30

•Display the standard input panel

Open a notepad or similar application, then tap the [Keyboard] icon in the upper right corner of the Graffiti input area to display the standard input panel. In the initial settings after installation, the [Hiragana] input panel will be displayed.

Enter the characters you



Tapping here will display the [Hiragana] input panel.

Screen images may vary depending on the Palm device.



Tap the [Keyboard] icon to change the default input panel that appears.


It's convenient to set your frequently used input panel as the default input panel.

You can change the default input panel in the ATOK settings screen.

▶ P.44 Changing dictionary settings and operating environment

•Switching Input Panels Tap the

name of the input panel displayed in the lower right corner of the input panel to display a list of input panels. Select the input panel you want to use from the list. If no input panels are displayed, tap [1] (or [123]) in the Graffiti input area to display a list of input panels.

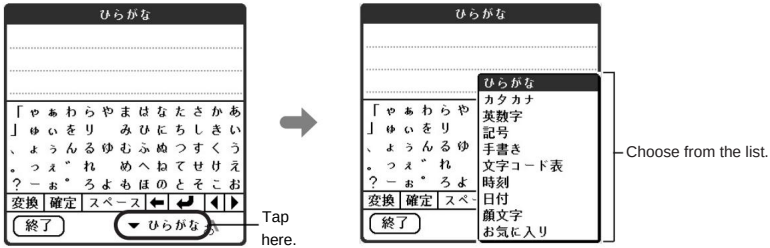

Hint


Function of the buttons on the input panel

	Conversion	The entered characters will be converted.
	Confirm	Confirm the entered and converted characters.
	space	Enter a space. Or, convert the characters you enter.
	[Backspace key]	Deletes the character to the left of the cursor.
	[Enter key]	This will insert a line break. Alternatively, it will confirm the entered/converted text.
	[Left/Right keys]	Move the cursor.



Hint

Functions of the Graffiti input area and surrounding icons when using ATOK

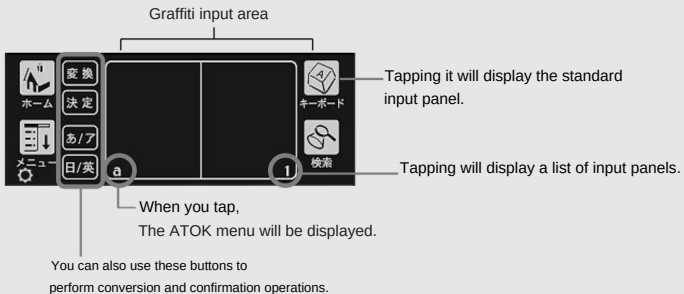

Screen images may vary depending on the Palm device.

•Enter text using a mix of kanji and kana characters.

This section explains how to input mixed kanji and kana text using the [Hiragana] input panel.

1. Tap the [Keyboard] icon in the upper right corner of the Graffiti input area.


The [Hiragana] input panel will be displayed.

2. Tap to type "I want to participate in the park event".



3. Tap it. If it's not

Use the input panel converted to the desired character, tap it again to display a list of candidates.

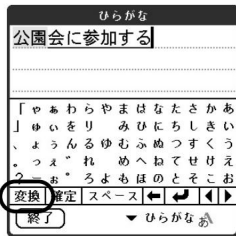

4. Tap "Lecture" from the list of options.

I will attend the lecture .

Confirm tap twice. All phrases will be confirmed.

Attend the lecture.



When you enter the reading incorrectly



Tapping the [Backspace key] will delete the character to the left of the cursor.



Revert to the state before conversion



After conversion, tapping the [Backspace key] will return you to the state before conversion. If you entered the wrong reading, you can revert to the state before conversion and correct it.



Confirm the converted characters all at once.

When all phrases have been correctly converted, you can tap  select [C. Confirm All] to confirm them all at once. Alternatively, you can also

confirm them all at once by tapping an area other than the unconfirmed text in the application display area.

Use th

Enter th

• Change the way clauses are divided

When you enter a long reading and convert it, the phrase divisions may be incorrect. In that case, tap to confirm the text up to the point where it has been correctly converted. Next, tap the [y/y] keys to change how the phrases are divided.

[Example] From Sakurada in various parts of the country y Cherry blossom news from all over the country

1. Enter "Zenkoku Kakuchi no Sakura Dayori" (Sakura News from all over Japan).

Sakura News from All Over Japan y

2. Tap Convert .

From Sakurada all over Japan y

3. Tap Confirm twice to confirm "Nationwide" and "Locally".

Use the input panel

From Sakurada all over Japan y

4. Tap the [y/y] keys to correct the way the phrases are divided.

Cherry blossom news from all over Japan y

Enter the characters yy

5. Tap Convert .

Cherry blossom news from all over Japan y


6. Tap Confirm twice.

Cherry blossom reports from all over Japan y



Change how phrases are divided using a stylus.

You can also change how phrases are segmented by dragging your stylus over the text being converted. The conversion will be performed automatically when you re-segment the text with the stylus.

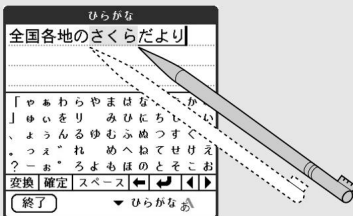

•Correct the characters you entered incorrectly.

If you notice a mistake after confirming the converted characters, correct it as follows:

1. Type "kouen osanpo suru" and convert it, Tap twice. Confirm

Taking a walk in the park

2. Tap to the right of "y" to move the cursor.

Take a walk in the park

3. Tap the Backspace key to delete "o".

Park y Taking a walk

4. Enter "y", Tap to confirm.

Take a walk in the park



Convert again immediately after confirmation / Undo confirmation

You can convert the characters again immediately after confirming them. After converting and confirming the characters, tap and select [D. Confirm Undo].

⚠The program will not execute if you enter other characters or move the cursor to a different position after confirming the input. If you confirm each phrase multiple times, only the most recently confirmed phrase will be reverted to its pre-confirmation state. Masu.



Hint

Convert characters entered in hiragana back to kanji later / re-convert

You can convert characters that you entered and confirmed in hiragana back into kanji or katakana later.

⚠Only hiragana, katakana, alphanumeric characters, and symbols can be re-converted. Kanji characters cannot be re-converted.

1. Drag the hiragana you want to re-convert. Tap the
2. conversion button. The converted characters will be displayed.
3. If you want to convert to a different character, tap again. 4. Tap the desetch character.

The hiragana character you drag will be replaced with the converted character.

Use th

Enter th

•Enter Katakana

When entering katakana characters, use the [Katakana] input panel.

- 1. Tap the name of the input panel in the lower right corner of the input panel, such as [yHiragana], and select [Ka] from the list.
Select [Takana]. P.23 Switch input panel The [Katakana] input panel will be displayed.
- 2. Tap to enter the text "swimming".

Swimming

- 3. Tap Confirm .

Swimming

Use the input panel

カクカナ

スイミング

「 ャ ャ ワ ラ ヤ マ ハ ナ タ サ カ ア 」 ャ イ ヨ リ ミ ヒ ニ チ シ ケ イ 、 ヨ ウ ン ル ユ ム フ ヌ ツ ス ク ウ 、 ツ エ レ メ ヘ ネ テ セ ケ エ ? ャ ャ ロ ヨ モ ホ ノ ト ソ コ オ 変換 確定 スペース ← → 終了 ▼ カクカナ

→

カクカナ

スイミング

「 ャ ャ ワ ラ ヤ マ ハ ナ タ サ カ ア 」 ャ イ ヨ リ ミ ヒ ニ チ シ ケ イ 、 ヨ ウ ン ル ユ ム フ ヌ ツ ス ク ウ 、 ツ エ レ メ ヘ ネ テ セ ケ エ ? ャ ャ ロ ヨ モ ホ ノ ト ソ コ オ 変換 確定 スペース ← → 終了 ▼ カクカナ

Tap the characters you want to enter

Tap here to confirm.

Enter the characters yy



Enter half-width katakana characters.

Before confirming, tapping and selecting [J. Japanese/English] will convert the input to half-katakana . Tapping on the left side of the **Conversion** input area performs the same function.



Hint

[Hiragana] Converts characters entered from the input panel to katakana.

Just like with normal input and conversion, you can convert to katakana by simply tapping . Alternatively, you can tap the character **Conversion**, then tap and select [y. Kana/Katakana] to convert to katakana. Tapping on the left side of the Graffiti input **Area** performs the same function.

•Enter letters and numbers

When entering letters and numbers, use the [Alphanumeric] input panel. When Japanese input mode is on (indicated by or in the lower right corner of the screen), you can input and convert

Japanese using Romaji input. This section explains how to input half-width letters when Japanese input mode is off (indicated by).

1. Tap the name of the input panel in the lower right corner of the input panel, such as [yHiragana], and select [English] from the list.

Select [Numbers]. The [Alphanumeric] input panel will appear (see P.23 for switching input panels).

2.  Tap the [Shift key], then tap "P".

 When you tap the [Shift key], only the next character you tap will be entered in uppercase.


The mode will be automatically deactivated.

A capital "P" will be entered.

P y

3. Next, tap "ark".

Park y

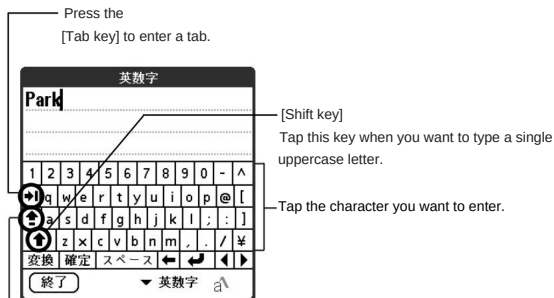

[Caps Lock key]

Enter uppercase letters. Tap again to return to lowercase.



I want to lock the input mode to uppercase.

 Tapping the [Caps Lock key] will allow you to input only uppercase letters. Tapping the [Caps Lock key] again will return you to  lowercase mode.



Convert Katakana words to English


► P.38

•Enter symbols, emoticons, etc.

There is also a convenient input panel for entering symbols, emoticons, dates and times, and for finding and entering characters whose readings you don't know from a list. For instructions on how to display the input panel, please see page 23.

•Enter the symbol


The [Symbols] input panel allows you to enter symbols and numbers.

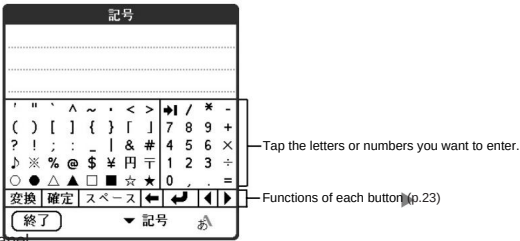

Use the input panel


•Enter emoticons

The [Emoticon] input panel allows you to enter emoticons commonly used in emails and other communications. You can also create and register your own emoticons. (P.40 Creating Emoticons)

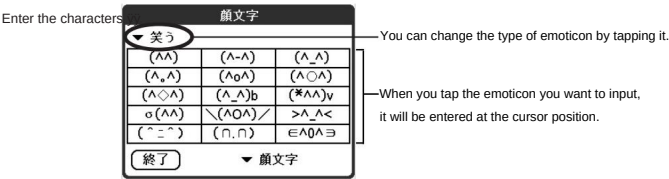


•Enter the date

The [Date] input panel makes it easy to enter today's date or choose a date format.

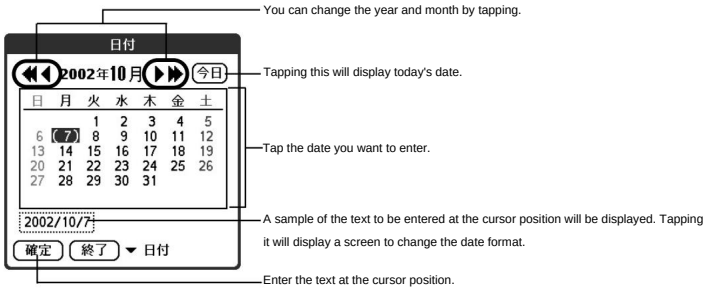


•Enter the time

The [Time] input panel makes it easy to enter the time by entering the current time or selecting a time format.

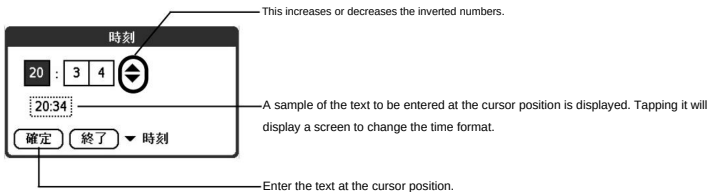

•Search from the list of code numbers

The [Character Code Table] input panel allows you to find and input characters whose pronunciation you don't know from the code table list.

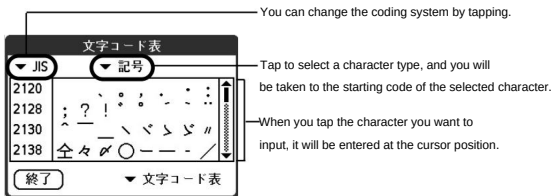

yCharacters not included in the font cannot be displayed.

text using ATOK's Japanese Graffiti function.

The Japanese Graffiti feature allows you to input characters by directly handwriting hiragana, symbols, and alphanumeric characters in the Graffiti input area. It's convenient because you don't need to memorize Graffiti characters.

•Enable the Japanese Graffiti function.

•Enable the Japanese Graffiti function.

Tap the bottom right of the screen and select [M. Handwriting On/Off], and the display will change from to .

You can use the Japanese graffiti function when displaying this.

•Switch input mode

The input mode switches depending on the type of characters you are entering. Each time you click Japanese/English on the right side of the Graffiti input area, the display in the lower right corner of the screen will switch between and .

	Hiragana mode	You can enter the reading in hiragana and have it converted to kanji.
	English mode	You can enter letters of the alphabet.
	Number and symbol mode	You can enter numbers and symbols.

Japanese Graffiti function.

List of characters recognizable in each input mode (p. 34)

•Enter the reading in hiragana and convert it to kanji.

Here, we'll explain an example of writing "mail o kuku" by hand and then converting it to "to send mail".


Enter the characters . Tap the icon in the lower right corner of the screen and select [M. Handwriting On/Off].

The display in the lower right corner of the screen will change to .

2. Using the two frames on the left and right of the Graffiti input area, alternately type "e-ru o-kuru" in hiragana.


Write by hand.

The recognized hiragana will be displayed at the cursor position.

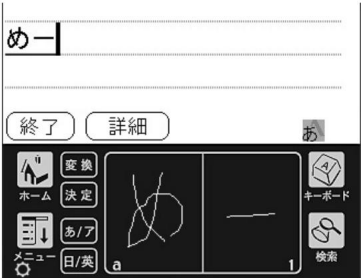

yDepending on the Palm device, characters may not actually be displayed in the Graffiti input area.

3. Tap the icon on the left side of the **Graffiti** input area.



Confirm 4. Tap the (or) on the left side of the Graffiti **input area** twice.



• **Correct characters that were not recognized correctly.**


If your handwritten characters are not recognized correctly, correct them as follows. The corrected characters will be correctly recognized the next time thanks to the handwriting learning function, so the more you use it, the better it will recognize your handwriting.

1. Tap on the character that was not recognized correctly.

Other options will be displayed.

At this time, if you tap and release the stylus for a longer time than usual, the text will be displayed in reverse.

The candidates will be displayed.

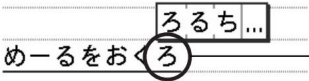

Tap and hold on the text for a while.

2. Tap to select the desired character from the list of candidates. If the desired character is not among the candidates, tap [...] to select it from the list of characters.

• **Erase incorrect characters**

To erase a character, move the cursor to the right of the character you want to delete, and then handwrite the Backspace key for the Graffiti character in the Graffiti input area. This will erase the character to the left of the cursor.

► P.34 Recognizable Graffiti Characters

● Start writing

Release the stylus

The thick dots indicating the starting point of writing are simply to show the starting position. Do not actually write there.

• **Convert to Katakana**

If you enter the reading in hiragana and tap the icon on the left side of the Graffiti **input area**, you can convert it to katakana.

•Enter letters, numbers, and symbols

Here, we will explain an example of typing "March" using the alphabet.


- 1. Tap the icon on the left side of the Graffiti input area.
The display in the lower right corner of the screen will change to .
- 2. Using the two frames on the left and right of the Graffiti input area, alternately write "March" in alphabetical letters.
The
recognized alphabet will be displayed at the cursor position .
When characters are not recognized correctly, see page 33: Correcting characters that were not recognized correctly.



- 3. Tap the icon on the left side of the Graffiti input area.
The alphabet will be converted to half-width characters.



- 4. Tap the (or) on the left side of the Graffiti input area. Decide



Use
the

Japanese Graffiti function!

Hint

Recognizable characters

Input Mode		Recognizable characters
	Hiragana mode	Ahhh. (period), (comma)
	English mode	AyZyz
	Number and symbol mode	y90 yyy"yy yyyyyyyyyyyyyy yyyyyy-yyyyyy

Enter the characters yy

Hint

Recognizable Graffiti Characters

Graffiti character	input status	Hiragana mode, English alphabet mode , Numbers and symbols mode
	not entered	space
	Entering	- (long vowel)
	Not entered, Entering	Backspace key (delete)
	not entered	Enter key (newline)

yThe thick dots indicating the starting point of writing show the position where you begin.
Please do not actually write it.



Hint

Tips for writing by hand

Paying attention to the following points will make it easier for your characters to be recognized correctly:

Write in block script. • When

writing dots like the diacritical mark "y", extend them so that they have a starting point and an ending point.



• For lowercase letters like "y", "y", and "abc...", the height and width of the character should be less than half the size of the frame.

I'll write it down.



• Dots like "•" and "•" should be written as small circles.



Hint

The left and right frames of the Graffiti input area are treated as equal divisions and used accordingly.

If the left and right frames of the Graffiti input area are different sizes, you can set it to treat the left and right frames as equally divided, regardless of their actual size. When

handwriting characters using the Japanese Graffiti function, treating the left and right frames as equally divided will make it easier for the characters to be recognized correctly.

1. Tap  and select [N. Handwriting Settings].
2. Select [Divide graffiti area equally]. 
3. Tap it.

Use
the

Japanes

Enter th


Useful features to know

• Predicts and displays characters entered once / Predictive Convers

Once you've entered a character, entering the first letter of its reading will automatically display conversion candidates that start with that reading.

1. Enter the first reading.

Predictive text suggestions will be displayed.

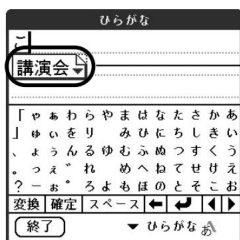

Tapping here will allow you to enter the displayed characters.

2. Tap the suggested text. The displayed text will be confirmed.

Features that are convenient to keep

Lecture/Seminar



Hint

Confirm only a portion of the characters displayed in the predictive text suggestions.

Drag the string displayed as a suggested conversion from the beginning to the point where you want to confirm it.



Hint

Select and enter from other suggested input options.

Tapping the y to the right of a suggested text will display a list of other suggested texts. From this list, tap the text you want to enter.


If the text you want to enter is not listed, tap anywhere outside the list and continue typing.

• Input by handwriting the characters.

You input the text by handwriting it directly.

1. Tap [1] (or [123]) in the Graffiti input area and select [Handwriting]. The [Handwriting] input panel will appear.
2. Write letters alternately in the left and right frames.

The recognized characters will be entered at the cursor position.

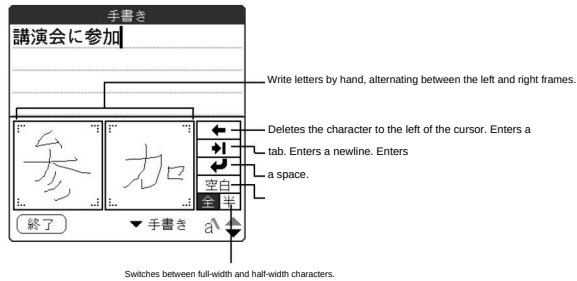


In the handwritten frame, the characters will actually be displayed alternately from left to right.



Correct characters that were not recognized correctly.

Tapping on a character that wasn't recognized correctly will display other options, from which you can select the desired character. To display the options, tap and release the stylus for a longer time than usual to highlight the character. If the desired character isn't listed, tapping [...] will allow you to select from a list of characters. The corrections you make will be correctly recognized the next time you use the app thanks to its handwriting learning function, so the more you use it, the better it will recognize your handwriting.

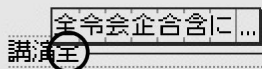

Tap and hold on the text for a while.



Enter half-width alphabet characters or katakana.

Tap the icon to the right of the semi-handwriting area to highlight it. You can input katakana, alphanumeric characters, and symbols in half-width characters.

Know

Features

•Converting Katakana words to English / Katakana English Dictionary

Using the Katakana-to-English dictionary, you can input the pronunciation of words written in Katakana, such as foreign place names and personal names, and convert them to English. This is useful when you don't know the English spelling.

Your system requires the Katakana-English Dictionary (ATDCKTOE.PDB). For instructions on how to install the Katakana-English Dictionary, please see the following pages: • For Windows: P.11 • For Macintosh: P.15



1. Set up the Katakana-to-English dictionary to be usable.

1. Tap the [Home] icon in the upper left corner of the Graffiti input area.
2.  Tap [ATOK Settings].

The ATOK settings screen will appear. 3. Tap [yMain] in the upper right corner of the screen and select [Dictionary/Learning]. 4. Tap the box to the right of [Dictionary 2].

This is the settings screen for Dictionary 2.

5. Select [English words written in katakana] from the list, Tap it.

The symbol will appear at the beginning of  ch [katakana English word].

6. Tap it.

Now you can use the Katakana English dictionary.

Features that are convenient to keep

2. Convert Katakana words to English

1. Type "internet".

Tap  and select [G. Dictionary 2 Conversion]. It will be converted to English.

3. Tap this button. The selected text will be confirmed.



Convert between uppercase and lowercase letters of the alphabet.

you tap while a word is being converted, some words will display a list of suggested spellings, such as first letter capitalized or all capitalized.



•Register and use frequently used documents / Favorites

You can register email signatures and frequently used documents, allowing you to easily recall and use them.

Register document

1. Tap the [Home] icon in the upper left corner of the Graffiti input area. 2. Tap [Favorites]. The Favorites Utility screen will appear. Tap [Favorites]. The New Registration screen
3. will appear.
4. Tap the y to the right of [Category] and select the category you want to register.
To register in a new category, select [Edit Category], create a new category, and then select it. 5. Enter the [Title]. Tap the
box below the body text or title. You
6. taken to the screen to edit the body text. 7. Enter the
body text and tap Finish . You will
return to the new registration . Tap .
8.
It will be registered as a favorite document.



2. Recall registered favorite documents

1. Create a screen where you can enter text.
2. Tap [1] (or [123]) in the Graffiti input area and select [Favorites]. 3. Tap the y to the right of [Category] and select a category. 4. Tap the y to the right of [Title] and select the title of the document you want to use. Tap . The selected document will be entered at the
5. cursor position.

•Create emoticons

You can register your favorite emoticons in the [Emoticon] input panel and use them.

▶ P.30 Enter emoticons

1. Tap the [Home] icon in the upper left corner of the Graffiti input area. 2. Tap [Emoticon UT].

The emoticon utility screen will appear. Tap [this

3. icon].

This is the category editing screen.

4. Enter a name to classify the emoticons in the [Category Name] field. Tap . 6.

5. Tap the y to the

right of [Outline] to [Right Hand] and select your desired characters for each. 7. Tap the emoticon you created. It will appear in the [Emoticons]

section.



Once you've created your emoticon, tap here to display it in the [Emoticons] section.

You can also edit it directly here.

Features that are convenient to keep.

8. Tap this. This will return you to the category editing

9. screen. Tap this.

The emoticons you create will be registered in the [Emoticons] input panel.

Register/delete words

•Register frequently used words

By registering words not found in the dictionary or frequently used words, you can input and convert them efficiently. Here, we will explain an example of registering "JustSystems Corporation" with the reading "Just".


Tap  and select [K. Register Word]. The word registration screen will appear.

2. Enter the [reading]. Here, enter "just". 3. Enter the [word].

Enter "JustSystems Corporation" here.

4. Tap the  to the right of [Part of Speech] and select a part of speech. Here, we select [Organism].

5. Tap  . The word will be registered.

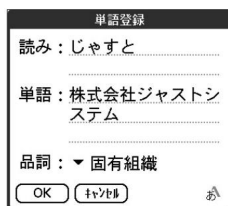


Pronunciation of words

- Enter up to 16 characters, either full-width or half-width. • Only full-width hiragana, full-width and half-width katakana, the alphabet (excluding vowels and "nN"), numbers, and symbols (yyyyyyyyyyyyyyyy) are allowed.
- Lowercase characters such as "y", "y", and "y", and the old forms of characters such as "y", "y", "y", and "y" cannot be used. • yyyyyy(long vowel)yyyyyyyyyyyyyyyyyyyy cannot be used at the beginning of a reading.



Hint

word length

- Please enter up to 25 full-width characters or 50 half-width characters.



Hint

Change registered information

1. Tap the [Home] icon in the upper left corner of the Graffiti input area.
2. Tap the preferences icon. 3. Tap the  in the upper right corner of the screen and select [User Dictionary].
4. Select the word you want to change change and tap . 5. Modify the content you want to change.
6.  Tap it.

Register

Delete

•Delete registered words

To delete a registered word, follow these steps:

1. Tap the [Home] icon in the upper left corner of the Graffiti input area. 2. Tap the preferences icon. 3. Tap the y in the upper right corner of the screen and select [User Dictionary]. 4. Tap to select the word you want to delete. Tap [Delete]. A deletion
5. confirmation message will appear. Tap [Yes]. The
6. word will be deleted.



Delete all registered words.

To delete all words, tap the [Menu] icon in the lower left of the Graffiti input area and select [Words - Delete All].

•Use words registered in ATOK (Windows version, etc.)

Register a word

If you want to use words registered in ATOK for Windows or other applications, use the HotSync function. This process allows you to import word files created with ATOK (such as the Windows version) onto a Palm device.

Delete

To use the HotSync feature, you need Palm Desktop software on your computer. For details, Please refer to the manual for your Palm device.

1. Create a word file using ATOK (Windows version, etc.)

1. Use the dictionary utility in the Windows version of ATOK to output a list of registered words and create a word file. For instructions on how to create a word file, please refer to the help section of the Windows version of ATOK.

► Continued on the next page

Import data from a word file using HotSync.

1. Launch the Palm Desktop software on your computer. 2. Click the [Notepad] button on the left side of the screen. Notepad will appear. 3. Under [Category], select [ATOK]. If [ATOK] is not present, click [Edit Category] and create a new category called [ATOK]. Enter "ATOK" in uppercase half-width characters.
4. Select [File - Import]. The [Import] dialog box will appear.
5. In [File name], set the file name of the word created in the operation. If you select "Text (*.txt)" for the [File type], the file names of the word files will be displayed in the list.
6.  Click here. The [Specify Import Fields] dialog box will appear. Click [OK]. A
7.  confirmation message will appear. Click [OK]. 9. Select
8.  [File - Exit].

The Palm Desktop software will close. 10.

Perform a HotSync between your computer and Palm device. Ensure that your computer and Palm device are connected via the cradle (or cable, etc.), then press the HotSync button on the cradle.

3. Register all Palm devices at once.

1. Tap the [Home] icon in the upper left corner of the Graffiti input area.
2. Tap the preferences icon. 3. Tap the  in the upper right corner of the screen and select [User Dictionary].
4. Tap the [Menu] icon in the lower left of the Graffiti input area. 5. Tap [Words - Batch Registration]. 6. Select [ATOK] for [Word Memo Format]. 7. In [Word Memo List], select the data transferred via HotSync.
8. .



Notice

Word files created with ATOK (Windows version, etc.)

When outputting the list, please turn off "Output in Unicode" before running the command.

Word files created with the "Output in Unicode" option enabled cannot be used.



Notice

Size of word files that can be used

Palm devices' Notepad can only handle data up to 4KB. If your Word file is larger than 4KB, please split the file before proceeding.

Register

Delete

ATOK dictionary settings and operating environment

To configure your dictionary or change your operating environment, use the ATOK settings screen.

- 1. Tap the [Home] icon in the upper left corner of the Graffiti input area.
- 2. Tap [ATOK Settings].
The ATOK settings screen will appear.
- 3. Tap [yMain] in the upper right corner of the screen and select the item you want to change.

The following items can be changed on each screen:

Input and conversion

ATOK設定

▼ 入力・変換

候補ウィンドウ

変換回数: ▼ 2

後変換候補の追加

☒ ひらがな

☒ 全角無変換

☒ 全角カタカナ

☒ 半角無変換

☐ 半角カタカナ

スペースキー空白入力

全角

半角

This setting determines how many times you need to perform the conversion operation, such as tapping the input panel icon, to display a list of candidates when converting to the candidate window . Tap the down arrow (y) to select the number of times.

Adding Conversion Candidates

This sets the character types to be added as conversion candidates. Enter the character types you want to add.

☒ I'll do that.

Space key space input: When Japanese input mode is on, this setting determines whether a space is entered as a full-width or half-width space.

Input assistance

ATOK設定

▼ 入力支援

予測変換/確定履歴

☒ 予測変換を有効にする

表示頻度

低

中

高

確定履歴

確定履歴のクリア

To enable predictive text , select [this option].

► P.36 Predictive text that displays characters entered once / Predictive conversion

Setting the display frequency to [High] will make predictive conversion candidates appear more frequently, while setting it to [Low] will make them appear less frequently.

Confirmation


History: To clear the history of confirmed characters stored in memory, tap .

Clear confirmation history

Change dictionary settings and operating environment

44

Dictionary/Learning

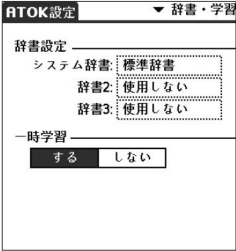


This setting configures the dictionary used for conversion. The system dictionary is used for normal conversion, such as tapping the input panel. You can also use dictionaries stored in external memory.

► P.20 Using External Memory

Temporary learning: This setting determines whether or not to learn from the conversion results.

Input panel

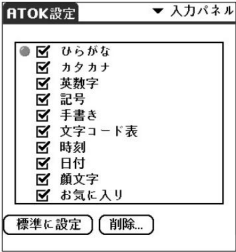


Set the input panel to be used. The mark indicates the default input panel that appears when you tap the [Keyboard] icon. If you want to change it, select the input panel you want to make the default and tap it. The mark will move, and it will be set as the default input panel.

► P.22 Display the input panel

Additionally, you can remove an input panel from the list by selecting it and tapping the icon. If you want to use a deleted input panel again, you will need to reinstall the application.

Handwriting input

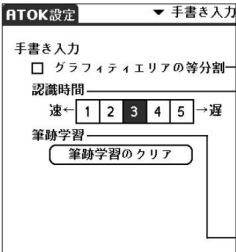

Equal division of the graffiti area
☒ If you select this option, when using the Japanese graffiti function, the left and right frames of the graffiti input area will be recognized as being equally divided, regardless of the actual size of the left and right frames.
If you select this option,
☐ the left and right frames of the graffiti input area will be recognized according to the actual size of the left and right frames.

Recognition Time: Set the time it takes for handwritten characters to be automatically recognized.

To clear the handwriting information learned through handwriting input, use the "Clear Handwriting Learning" function.



Convert using the dictionaries set in Dictionary 2 and Dictionary 3.

To convert using the dictionary set as Dictionary 2 or Dictionary 3, enter the reading, then tap and select [G. Dictionary 2 Conversion / H. Dictionary 3 Conversion].

At JustSystems, we welcome your feedback and suggestions regarding our products. Your opinions will be used to improve future products, so please share them with us. You can submit your feedback and suggestions through the JustSystems website below.

<http://www.justsystem.co.jp/ask/>

Please note that we do not provide individual responses.

ATOK's Japanese language processing is supervised by the "ATOK Supervision Committee."

▽ ATOK Supervision

Committee:

Junichiro Kida, Joji Takamoto, Koji Torikai, Masahiro Ijima, Tsunawo Ogino

This manual data was created by JustSystems Corporation, and the copyright to this manual data belongs to JustSystems Corporation.

Please also confirm the following points:

1. Customers may use the manual data as is, either on screen or as printed materials.

It is possible.

2. Customers may not alter the contents of the manual data. They may excerpt, edit, or use portions of the manual data. In such cases, they must clearly indicate that they have edited or used the data, and include the following copyright notice from our company.

©2002 JustSystems Corporation

3. Customers may save or print excerpts and edited manual data. However,

You may not provide or lend this to any third party.

ATOK for Palm OS 5 Japanese Graphics Compatible Version

Publisher: Kazunori

Ukigawa Publishing House: JustSystems

Corporation Address: Brains Park, Tokushima City, 771-0189 Japan

©2002 JustSystems Corporation

• "ATOK for Palm OS 5 Japanese Graffiti Compatible Version" is a copyrighted work of JustSystems Corporation, and "ATOK for Palm OS 5 Japanese Graffiti

Copyright and other rights related to the "Compatible Version" belong to JustSystems Corporation and the respective rights holders. • "ATOK" is a registered trademark of JustSystems Corporation.

• Palm OS, Graffiti, and HotSync are registered trademarks of Palm, Inc. and its subsidiaries.

• TEMOLIB-S is a registered trademark of Hitachi Information Systems, Ltd.

• Other company names, product names, etc. mentioned are registered trademarks or trademarks of their respective companies, or trademarks of our company.

• Copying or reproducing any part or all of this manual, in any form, without the written permission of JustSystems Corporation is prohibited.

• The contents of this manual are subject to change without notice.